


# How to Repair IMEI and Reset FRP ZTE Axon Series, ZTE Blade series, Vodafone and Turkcell devices ?


1. Power off device, Press hold vol- and power button, you will see the FTM Screen, after see it leave buttons

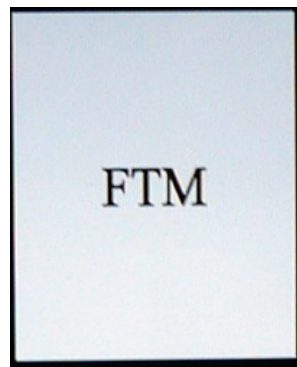


2. Unstick Auto and use Brand and Model, ex : ZTE Turkcell T70.




3. Open Qualcomm Module then at Reboots option use FTM to EDL button.

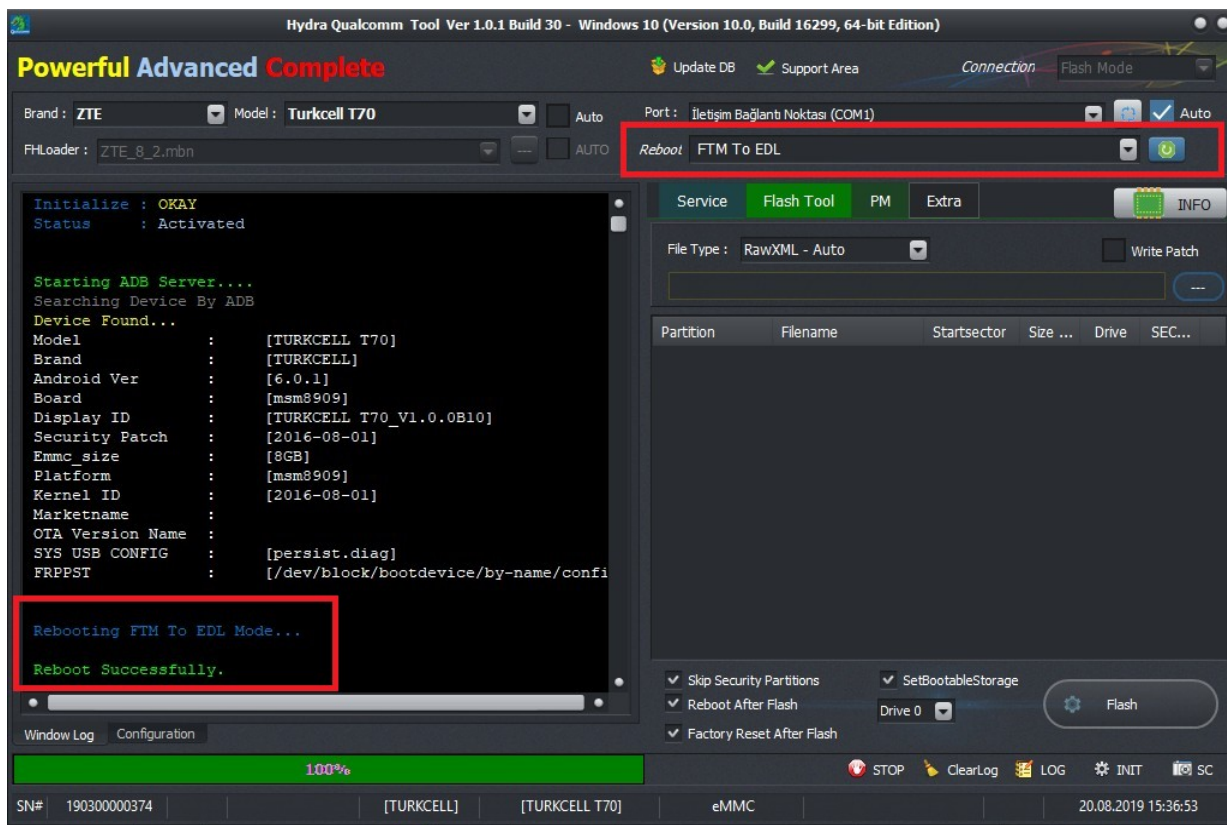

4. You need see QdLoader 9008 Com port at Device Manager, Like this :

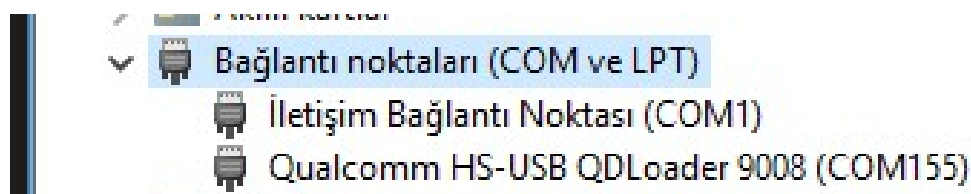


5. Go to Service tab, Tick Security Partitions then Select Wipe Security Option, Then click Excute button, Click Yes, it will Auto backup Security, Like This :

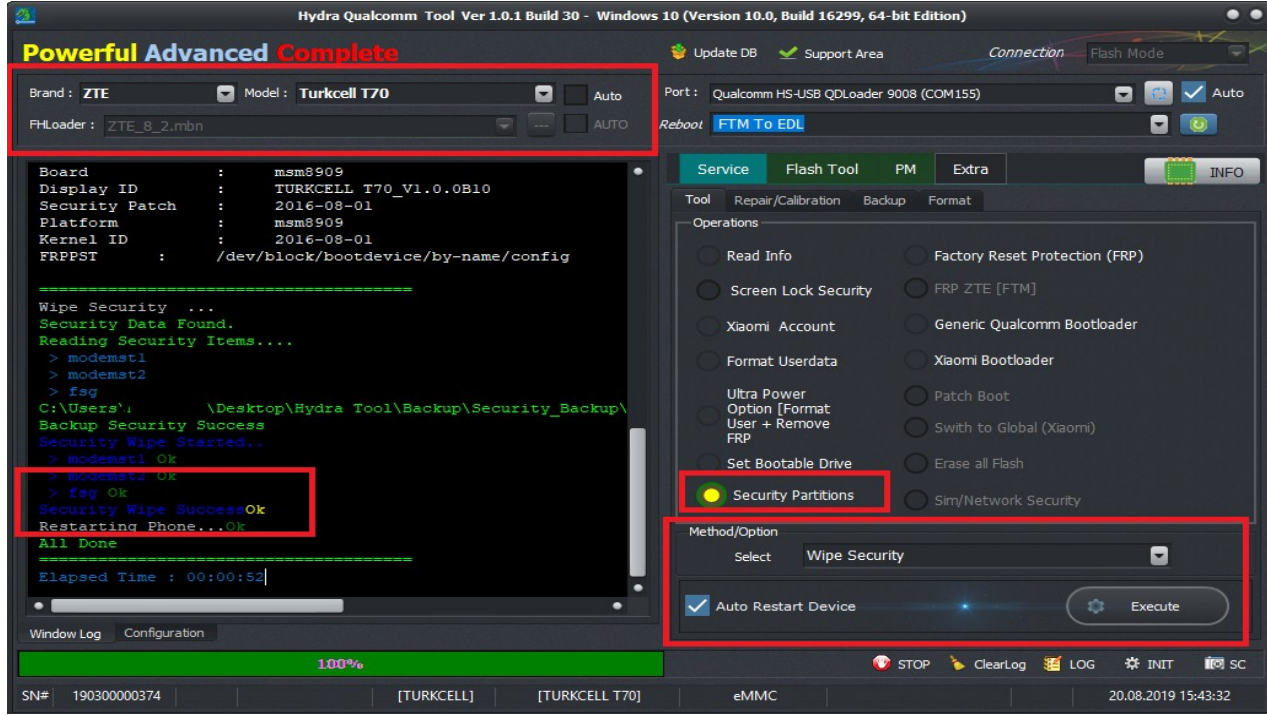






6. Your device will restart and Your IMEI Number will be 0, again Power off device Put again to FTM Mode Follow Step 1

7. Install FTM Diag driver, if its installed you can skip this step.

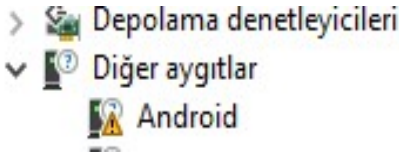

8. for Install, Go to Support Area and this path / Drivers / ZTE FTM /ZTE\_Android\_USB\_Driver Download and Unzip it and Install the Setup of driver abd click right on Android Then follow these steps for manuel install

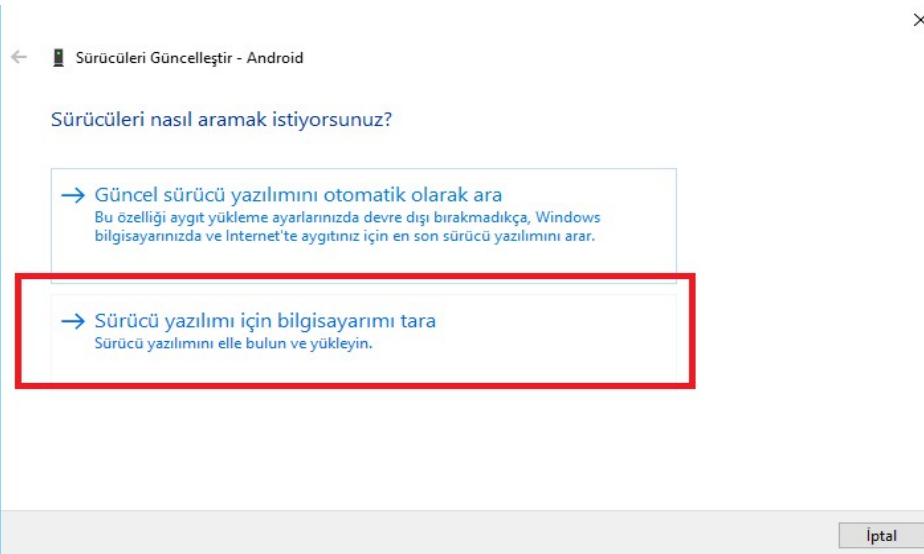

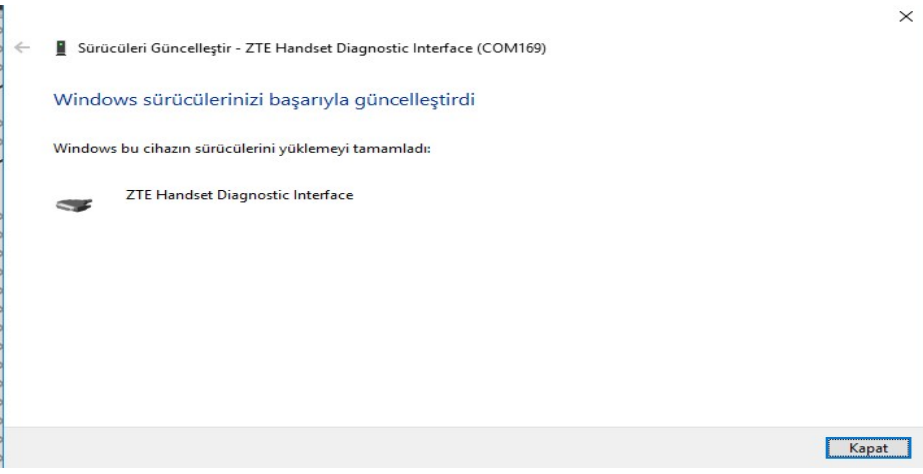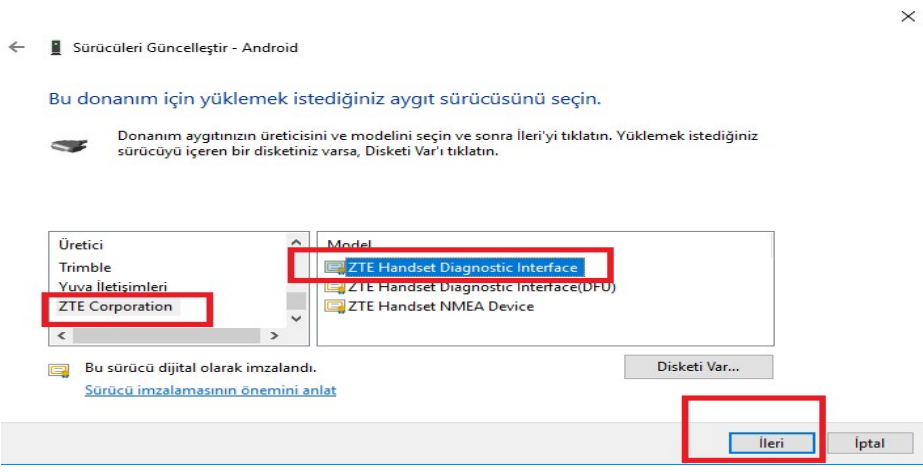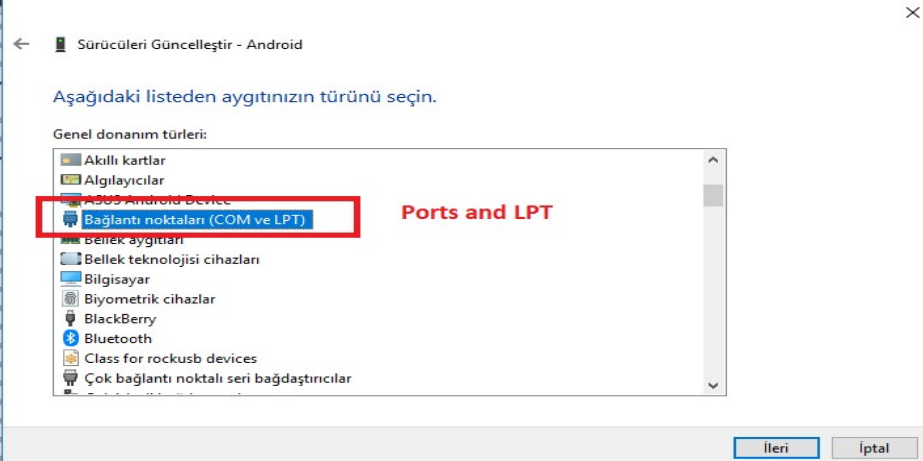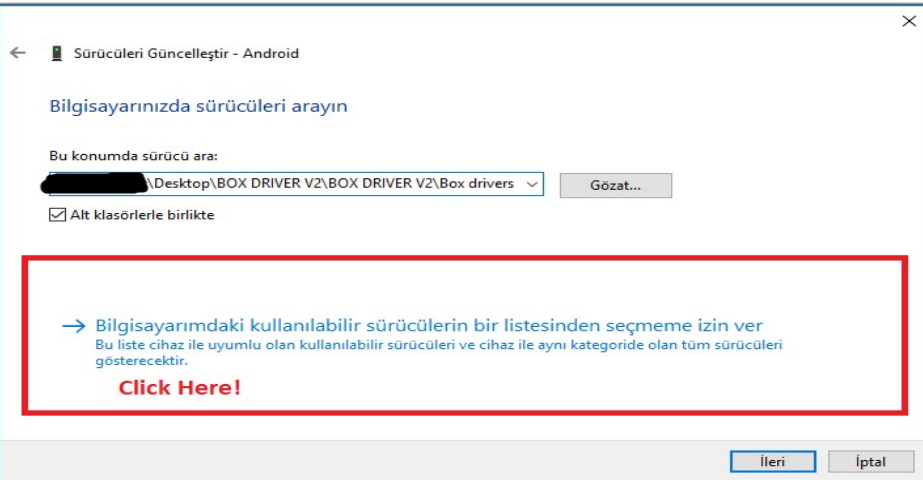

**9. Go to Qualcomm Module Service -> Repair/Calibration Tab, Type there your IMEI Number Select Diag Port and Click To Repair IMEI Button**

